

Pentair Quad D.E. Filter Series parts diagram: Quad 60, Quad 80, Quad 100

Replacement Parts

Replacement Parts List

ITEM	P/N	DESCRIPTION
1	98220100	ASSY. MANUAL AIR RELIEF VALVE
2	170024	LID, QUAD 60
2	178581	LID, QUAD 80
2	178582	LID, QUAD 100
3	178616	SPRING COMPRESSION - CNC PLS
4	178576	ADAPTER, SHORT
5	170014	MANIFOLD TOP CART - CNC PLS
6	170029	AIR BLEEDER ASSY., QUAD 60
6	170028	AIR BLEEDER ASSY., QUAD 80
6	178583	AIR BLEEDER ASSY., QUAD 100
7	178656	CARTRIDGE, QUAD 100
7	178655	CARTRIDGE, QUAD 80
7	178654	CARTRIDGE, QUAD 60
8	195981	BACKWASH ASSY. - QUAD DE 60
8	195982	BACKWASH ASSY. - QUAD DE 80
8	195983	BACKWASH ASSY. - QUAD DE 100
9	170059	MANIFOLD ASSY. BOTTOM - QUAD DE
10	190003	CLAMP RPM FLT FINISHED
11	39010200	O-RING RPM TANK CLAMP
12	195339	RING BACKUP- FNS PLS CNC PLS
13	190039	BAFFLE ASSY. - CNC PLS
14	354571	O-RING 200-830 QUICK CONN.
15	178567	PIPE OUTLET - RPM FLTR
16	195999	TANK, BOTTOM ASSY.
17	178575	BULKHEAD BOTTOM - FNS PLS
18	194801	BULKHEAD - FNS 2 3/8-8 BUTT
19	86006900	O-RING 2-329 BULKHEAD RPM
20	194997	NUT - FNS/INS SPL
21	195611	WASHER - FNS/INS LG ID
22	195612	SPRING- FNS/INS
23	195610	WASHER - FNS/INS SM ID

